



Read Before You Paint

Read these important instructions **before** using Waterproof Outdoor Fabric Paint.

BEFORE YOU BEGIN

- ➔ **Carefully read these instructions in their entirety and the instructions on the can before spraying your project.**

This paint is specialty paint. This Outdoor Paint provides thick coverage and leaves a vinyl-like feel to the fabric.

For Upholstery Paint instructions, see the the front of this pamphlet.

TESTING THE PAINT

- ➔ **Test the paint on a hidden area of your project and let it dry for 72 hours before spraying the entire project.**

DO NOT OVER SHAKE THE CAN. If the paint adheres to the hidden area and you are satisfied with the results **AFTER** is it fully dry, only then should you proceed to spray the rest of the piece.

PAINTING YOUR PROJECT

- ➔ **DO NOT open multiple cans at once.**

If there's a problem, **STOP** opening cans and call us at (401) 769-8800, 10:00 AM–5:30 PM, Monday–Friday. We cannot reimburse for opened or used cans.

- ➔ **Lay your project on a flat surface and cover areas you do not want paint on.**

Use painter's tape, plastic, and cardboard to adequately protect any surfaces from overspray. This paint will not wash out.

To prevent drips, set up your project so that the surface being painted is laying flat or is level.

- ➔ **Pull the can's trigger back all the way.**

This will create a wide, conical spray that's easy to control and apply. If you pump or pull the trigger partially, you will allow the propellant to escape without paint. This wastes propellant and will ultimately render the can useless.

Practice. At first the paint may shoot out. Do not be alarmed. Keep full tension on the trigger until a cone spray appears. Please note that young children often need help spraying.

PAINTING YOUR PROJECT, continued

- ➔ **Keep the can upright while spraying.**

There is a tube attached to the spray mechanism (like a Windex bottle). If the can sputters, tilt the can upright so that paint will be in the tube. To avoid sputtering and wasting propellant, keep the can upright as much as possible when spraying. Tilting your project is okay but return it to its flat position to prevent drips.

To further prevent drips, start and stop spraying into a rag or off the project.

- ➔ **It's best to use the entire can in a single application.**

However, you may reuse the can if you clean the nozzle.

- ➔ **What if the can doesn't spray?**

DO NOT OVER SHAKE THE CAN. It is rare that you will have a bad can. First, make sure the can's top is on tight. If it is, tug the trigger forward and push back gently to reset it.

If the problem persists, please call (401) 769-8800 **BEFORE** opening any additional cans.

- ➔ **How to Clean for Storage**

Turn the can upside down. Spray until it sprays clear. Rinse the nozzle with water until it's clean. Store the can upside down with the nozzle submerged in water (e.g., in a plastic cup).

For Waterproof Outdoor Paint Project tips and techniques, see the inside of this pamphlet.

10% OFF

YOUR ENTIRE PURCHASE

Coupon Code: **FABPAINT**

Use on **FabricSprayPaint.com**

to receive 10% off your next order.*

*Cannot be combined with other offers.

Share your project with us and get

20% OFF

YOUR NEXT PURCHASE*

Log in and submit your project at

FabricSprayPaint.com/Projects/Submit-Post

*One-time use per shared project. Cannot be combined with other offers.

Waterproof Outdoor Fabric Paint

BEFORE YOU BEGIN

Test the paint **FIRST**.

IMPORTANT When painting furniture, be sure to do a **COMPLETE TEST** on a hidden area that matches the surface fabric. Let the paint dry completely over three days, then check to make sure your paint adheres to the fabric and that you're satisfied with results before starting your project.

Only open one can at a time. We are not responsible for the results of your painting project and will not credit for used cans or damaged furniture.



Colors available in quantities of:

Single Cans
\$14.99

3-Packs
\$43.50

6-Packs
\$84.00

12-Packs
\$162.00

Outdoor Paint Colors

13.3 oz. Cans **\$14.99**

Olive
SPOP409

Hunter Green
SPOP403

Burgundy
SPOP406

Rust
SPOP402

Brown
SPOP408

Tan
SPOP413

Royal Blue
SPOP401

Charcoal
SPOP412

Black
SPOP400



Two cans of Hunter Green Outdoor Fabric Paint gives a new look and longer-lasting life to a patio umbrella.

Outdoor Fabric Painting Tips & Techniques

Restore, protect, and colorize outdoor furniture fabrics with Simply Spray® Waterproof Outdoor Fabric Paint.

Outdoor Fabric Paint is a waterproof, non-toxic, non-flammable aerosol paint for use on outdoor fabric items that need to survive the rigors of

weather. The paint is permanent, fast-drying, and safe to wash and dry (it is recommended to wait 72 hours before washing).

This paint can be used on both absorbent AND non-absorbent surfaces, unlike our Upholstery Paint.

PLEASE NOTE The color of these paint products may vary from the colors printed on this page.

Test the paint on a hidden area of your project first to confirm you are satisfied with the resulting color.

Outdoor Paint provides thick coverage and leaves a vinyl-like feel to the fabric. It is best suited for patio umbrellas, marine canopies, bimini tops, and awnings. We do not suggest this paint for seat cushions that will be in the sun, as the paint will be sticky on the skin when it's hot outside.

Always test the paint first. If you are not completely satisfied with the result of your paint test, call us to return unopened cans.

Do not shake the can. This will cause the paint to bubble.

Hold the can upright while spraying.

To avoid drips make sure the surface you are spraying is laying horizontal and flat. Spray in light coats.